30106271GB.fm Page 1 Monday, March 30, 2009 6:24 PM

AUS (GB) WFE 1070 BD

PROGRAMME CHART

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication

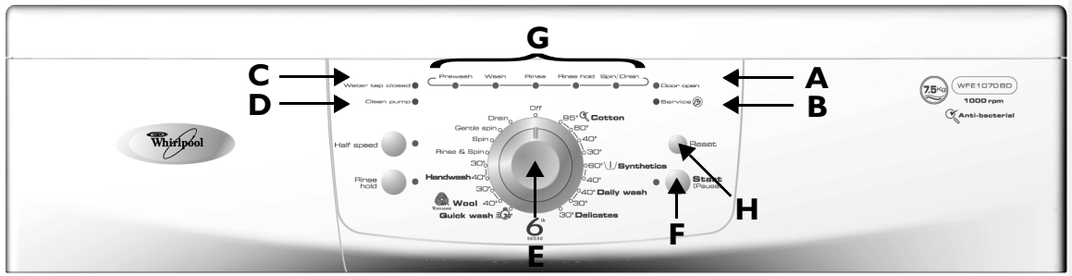

E. Programme selector

F. "Start (Pause)" button

G. Programme sequence indicator

H. "Reset" button

Programme	Care Labels	Max Load kg	Type of wash/Notes - *Respect the manufacturer's recommendations on the care label.*	Detergents and additives: Pre-wash	Detergents and additives: Main wash	Detergents and additives: Softener	Special options: Half speed	Special options: Rinse hold	Spin Speed rpm
Cotton *95 °C*	95	6.5	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.). This programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	—	Yes	❊	❊	❊	1000
Cotton *60 °C*	60	7.5	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	—	Yes	❊	❊	❊	1000
Cotton *30 - 40 °C*	40 30	6.5							
Synthetics *60 °C*	60	3.0	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. *This programme includes a prewash cycle.*	Yes	Yes [2]	❊	❊	❊	1000
Synthetics *40 °C*	60 50 40	3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	—	Yes	❊	❊	❊	1000
Daily wash *30 - 40 °C*	40 30 40 30	4.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	❊	❊	❊	1000
Delicates *30 °C*	40 30	1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	—	Yes	❊	❊	❊	1000
Quick wash *30 °C*	30	4.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	❊	❊	❊	1000
Wool *30 - 40 °C*	Woolmark 40	1.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	❊	❊	❊	1000
Handwash *30 - 40 °C*		1.0	Textiles made of linen, silk, wool and viscose marked as "handwashable".	—	Yes	❊	❊	❊	400 [1]
Rinse & Spin	—	7.5	*Same as the last rinse and the final spin in the "Cotton" programme.*	—	—	❊	❊	❊	1000
Spin	—	7.5	*In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.*	—	—	—	❊	—	1000
Gentle Spin	—	1.0	*In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.*	—	—	—	❊	—	1000
Drain	—	—	*Water is drained only without any spinning.*	—	—	—	—	—	—

❊: optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in this programme.
2) Do not use liquid dergent for the main wash.

The wool cycle of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0620

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06271

Black process 45.0° 150.0 LPI

30106271GB.fm Page 2 Monday, March 30, 2009 6:24 PM

PROGRAMME DATA

Programme	Temperature (°C)	Load (kg)	Approx. Programme Duration (hours : minutes)
Cotton *	95	6.5	2:10
Cotton**	60	7.5	2:40
Cotton	40	6.5	2:05
Synthetics *	60	3.0	1:53
Synthetics	40	3.0	1:20
Daily wash	40	4.0	1:00
Delicates	30	1.5	0:45
Quick wash 30'	30	4.0	0:30
Wool (Woolmark)	40	1.0	0:45
Handwash	40	1.0	0:40

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.
** Reference Programme for Energy and Water labeling.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in your Instructions for Use. Close the door and turn the **programme selector** to the desired programme and temperature. The indication lamp next to the **"Start (Pause)"** button blinks.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lamp lights up.

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Half speed" button

- Reduces the predetermined automatic maximum spin speed to treat your laundry more gently.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily wash" and "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave the laundry items to soak for too long.

  Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indicator is on. The indication lamp next to the **"Start (Pause)"** button blinks.

Terminate the "Rinse hold" option:

- Press the **"Start (Pause)"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start (Pause)"** button.

PROGRAMME START

Open the taps and press the **"Start (Pause)"** button. The indication lamp next to the **"Start (Pause)"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

When the programme phase is finished, the corresponding indication goes off.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

RED INDICATIONS

"Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your "Instructions for Use"; if the fault persists, contact our After Sales Service.

"Water tap closed"

The appliance has no or insufficient water supply. Open the water taps; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

"Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off/O" position.
2. Close the water taps.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start (Pause)"** button to pause the programme. The light blinks.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

Black process 45.0° 150.0 LPI